



1. 机壳分组件/Machine frame&miscellaneous cover components

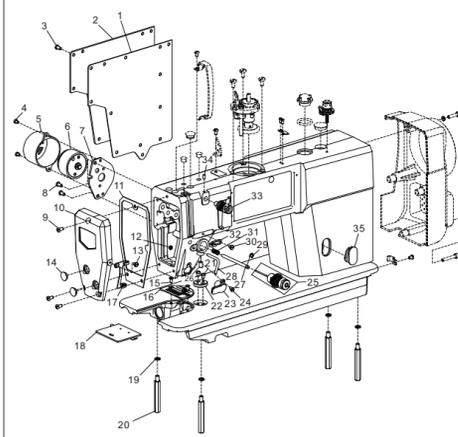


序号 Ref.No.	物料号 Part.No.	名称 Description	数量 Qty	备注 Remark
1	29.07.005	后面板垫	1	
2	29.07.003	后面板	1	
3	02.09.033	螺钉	10	
4	29.02.115	螺钉	2	
5	29.07.035	松线电磁铁罩	1	
6	29.07.055HL	松线电磁铁部件	1	
7	29.07.010	电磁铁固定板	1	
8	02.09.007	螺钉	2	
9	02.09.003	螺钉	1	
10	29.07.064	面板	1	
11	29.07.004	面板垫	1	
12	29.01.204-1	六角螺母	1	
13	02.09.010	螺钉	1	
14	02.05.016	面板塞	2	
15	02.09.026	螺钉	2	
16	29.01.114	板	1	
17	05.01.028	针板	1	H
18	29.07.011	左线钩	1	
19	02.06.001	侧板部件	1	
20	23.302	弹簧垫圈	4	
21	01.01.001	底座支柱	4	
22	02.09.035	螺钉	2	
23	02.05.003	卷边器座	1	
24	29.07.056HL	电子夹线器部件	1	
25	11.05.099	螺钉	1	
26	02.02.021BZ	夹线器部件	1	
27	02.02.021BZ	夹线器部件	1	H
28	02.09.035	螺钉	1	
29	29.07.018	松线辅助钉	1	
30	29.01.204	侧板钩	1	
31	29.07.010	开口挡圈	1	
32	02.09.010	螺钉	1	
33	29.01.199	松线辅助弹簧	1	
34	02.07.012	右线钩	1	
35	29.01.053BZ	上夹线器	1	
36	29.02.108	螺钉	1	
37	29.07.034	油杯窗	1	

1. 机壳分组件/Machine frame&miscellaneous cover components

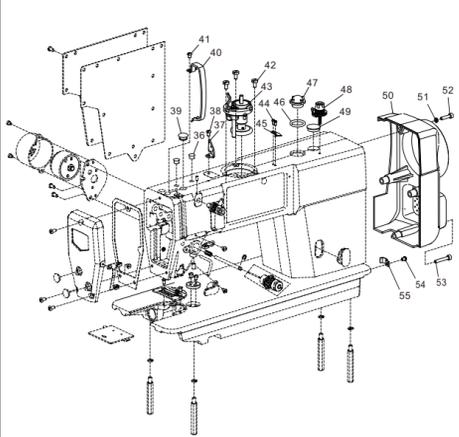


序号 Ref.No.	物料号 Part.No.	名称 Description	数量 Qty	备注 Remark
36	02.05.017	橡胶塞	1	
37	29.01.179	三根过线板	1	
38	02.09.007	螺钉	1	
39	02.05.013	橡胶塞	1	
40	30.01.094	螺纹杆护套	1	
41	02.09.007	螺钉	1	
42	29.02.005	螺钉	3	
43	29.07.062	绕线器部件	1	
44	29.02.096	螺钉	2	
45	29.01.017	绕线切刀	1	
46	02.05.005	O形圈	1	
47	02.05.006	油窗	1	
48	29.01.053BZ	绕线头夹器部件	1	
49	29.01.109	橡胶塞	1	
50	30.01.096	电机罩壳	1	
51	0000	垫圈	3	
52	29.02.097	螺钉	3	
53	0000	螺钉	1	
54	02.09.007	螺钉	1	
55	05.05.016	电线夹	1	
51	02.05.017	橡胶塞	2	

2. 上轴、换线分组件/Main shaft&thread take-up components

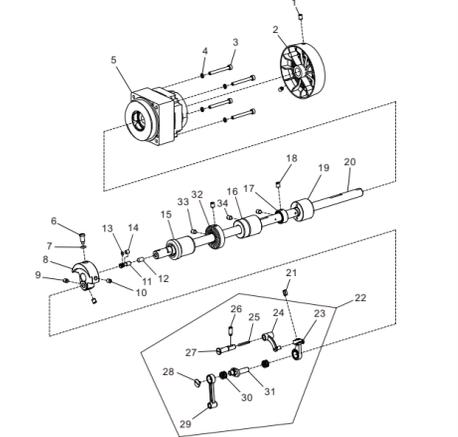


序号 Ref.No.	物料号 Part.No.	名称 Description	数量 Qty	备注 Remark
1	29.02.103	螺钉	1	
2	29.07.083	上轮	2	
3	29.07.067	螺钉	4	
4	23.303	弹簧垫圈	4	
5	30.01.094	上轴电机	1	
6	02.09.004	螺钉	1	
7	01.03.012	O形圈	1	
8	29.01.151	针杆平衡	1	
9	01.03.009	螺钉	2	
10	02.09.003	螺钉	1	
11	02.07.013	曲柄油盖调节器	1	
12	23.81	大动刀架	1	
13	02.05.018	O形圈	1	
14	02.07.014	曲柄油盖调节器	1	
15	29.07.076	上轴前轴套	1	
16	02.09.003	螺钉	1	
17	29.07.019	上轴螺母	1	
18	01.10.039	螺钉	2	
19	29.04.040	上轴后轴套	1	
20	29.07.050	主轴	1	
21	02.07.029	换线杆油套	4	
22	02.04.015	换线杆部件	1	
23	02.04.019	换线杆	1	
24	02.04.018	换线切刀	1	H
25	23.76	油线	1	
26	02.09.005	螺钉	1	
27	02.04.020	换线连杆	1	
28	02.04.021	螺钉	1	
29	02.04.019	针杆平衡	1	
30	01.04.030	滚针轴承	2	
31	02.04.016	换线曲柄	1	
32	02.04.016H	换线曲柄	1	H
33	29.04.014	换线主动轮	1	
34	29.02.039	螺钉	2	
35	01.10.040	螺钉	2	

5. 剪线分组件/Thread Trimmer Components

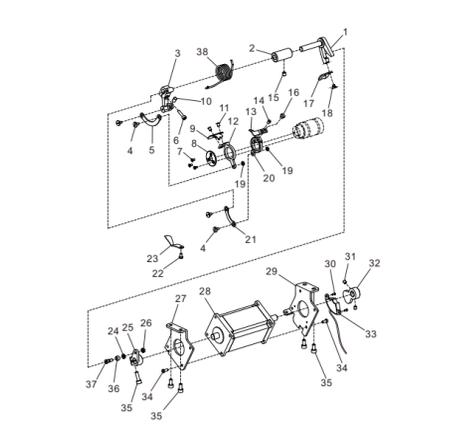


序号 Ref.No.	物料号 Part.No.	名称 Description	数量 Qty	备注 Remark
1	29.07.027	切线凸轮轴	1	
2	29.07.022	切线轴承	1	
3	02.09.016	切线曲柄	1	
4	29.06.033	螺钉	4	
5	29.06.013	长连杆	1	
6	29.02.134	螺钉	1	
7	29.02.104	螺钉	3	
8	29.06.020	刀架压板	1	
9	29.06.003	大动刀	1	
10	29.06.016-2	缓冲垫	1	
11	29.02.012	螺钉	2	
12	29.06.010	大动刀架	1	
13	29.06.002	小动刀	1	
14	29.02.012	螺钉	1	
15	02.09.008	螺钉	1	
16	02.09.003	螺钉	1	
17	29.07.015	切线凸轮轴手柄	1	
18	01.10.006	螺钉	1	
19	29.06.032	六角螺母	2	
20	29.06.011	小动刀架	1	
21	29.06.014	短连杆	1	
22	02.09.034	螺钉	1	
23	29.06.017	分线片	1	
24	29.07.044-1	轴套	1	
25	29.07.044-2	切线驱动曲柄	1	
26	29.07.044-3	六角螺母	1	
27	29.07.016	剪线电机前支架	1	
28	30.01.093	剪线电机	1	
29	02.04.020	换线连杆	1	
30	29.07.007	螺钉	2	
31	30.01.093-2	换线曲柄	1	
32	30.01.093-1	换线曲柄	1	
33	29.07.068	剪线电机传感器	1	
34	11.05.070	螺钉	1	
35	29.02.134	螺钉	5	
36	29.07.044-4	滚珠	1	
37	29.07.044-5	螺钉	1	
38	29.07.074	复位弹簧	1	

6. 送料分组件/Feed Mechanism Components

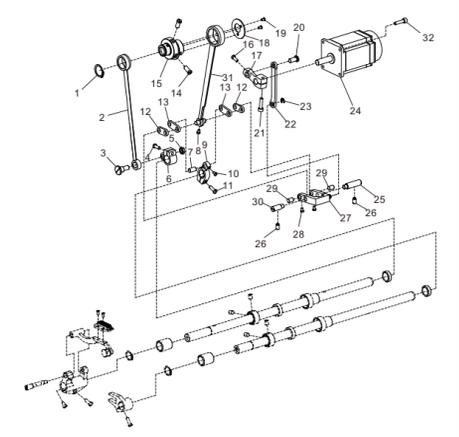


序号 Ref.No.	物料号 Part.No.	名称 Description	数量 Qty	备注 Remark
1	23.301	轴用挡圈	1	
2	02.07.016	指牙连杆	1	
3	02.09.025	螺钉	1	
4	29.02.113	螺钉	1	
5	02.09.041	六角螺母	1	
6	02.07.023	指牙后曲柄	1	
7	02.07.007	销	1	
8	02.09.011	螺钉	1	
9	02.07.020	送布曲柄	1	
10	02.07.020H	送布曲柄	1	H
11	02.09.011	螺钉	1	
12	01.10.023	螺钉	1	
13	02.07.008	短摆板	2	
14	02.07.008H	短摆板	2	H
15	02.07.009	长摆板	2	
16	29.01.092-1	送布曲柄	1	
17	02.07.022H	送料偏心轮	1	H
18	29.02.101	螺钉	1	
19	29.07.038	针距曲柄	1	
20	02.07.011	偏心轴盖板	1	
21	29.02.104	螺钉	2	
22	29.07.039	分线片	1	
23	29.07.039	分线片	1	
24	29.07.030	针距连杆	1	
25	23.308	开口挡圈	1	
26	30.01.092	针距电机	1	
27	02.03.005	右轴	1	
28	02.09.005	螺钉	2	
29	29.07.089	调节板部件	1	
30	29.09.011	螺钉	2	
31	02.07.010	销	2	
32	02.03.006	左轴	1	
33	0000	送料连杆	1	
34	0000	螺钉	4	

6. 送料分组件/Feed Mechanism Components

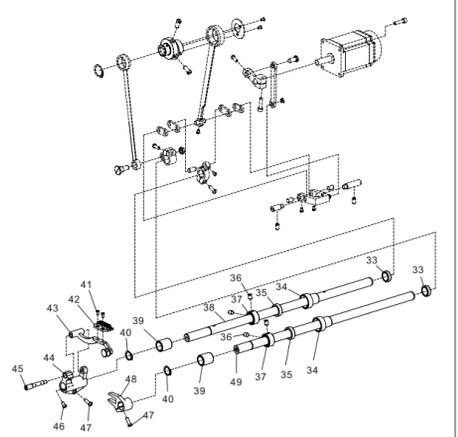


序号 Ref.No.	物料号 Part.No.	名称 Description	数量 Qty	备注 Remark
33	0000	橡胶塞	2	
34	29.01.036	送料轴前轴套	1	
35	0000	油封	2	
36	0000	螺钉	4	
37	0000	送料轴挡圈	2	
38	29.07.053	送料轴	1	
39	29.01.036	指牙送料轴前轴套	1	
40	23.301	轴用弹性挡圈	2	
41	02.09.029	螺钉	2	
42	29.01.093	送料牙	1	H
43	29.01.092	牙架部件	1	
44	29.01.092-1	牙架曲柄	1	
45	29.01.092-2	牙架销	1	
46	29.01.092-3	螺钉	1	
47	29.01.092-4	螺钉	2	
48	29.01.092-6	指牙叉形曲柄	1	
49	29.07.052	指牙轴	1	

3. 针杆、勾线分组件/Needle bar & Hook of driving shaft components

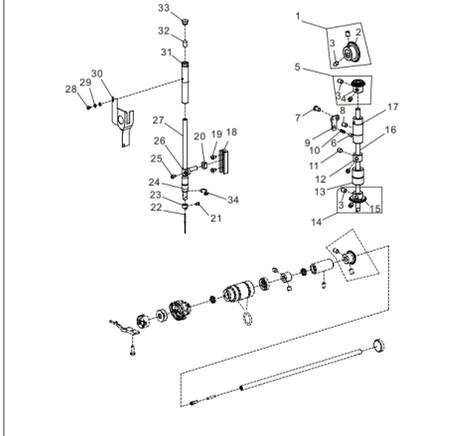


序号 Ref.No.	物料号 Part.No.	名称 Description	数量 Qty	备注 Remark
1	29.01.190	上轴伞齿轮部件	1	
2	29.01.190-1	上轴伞齿轮	1	
3	29.01.190-2	螺钉	8	
4	29.01.189-1	竖轴上伞齿轮	1	
5	29.01.189	竖轴上伞齿轮	1	
6	01.05.009	柱塞	1	
7	12.06.036	螺钉	1	
8	01.10.040	螺钉	1	
9	29.07.014	柱塞压板	1	
10	01.05.010	弹簧	1	
11	01.10.039	螺钉	2	
12	29.07.020	挡圈	1	
13	29.07.030	轴承支持	1	
14	29.01.191	竖轴下伞齿轮部件	1	
15	29.01.191-1	竖轴下伞齿轮	1	
16	29.07.029	竖轴	1	
17	29.07.023	竖轴上轴套	1	
18	02.04.014	滑块槽	1	
19	02.09.034	螺钉	2	
20	02.04.004	针杆连接柱	1	
21	01.10.006	螺母	1	
22	01.04.029	针杆DPx114#	1	
23	29.01.200	DPx5 18#机针	1	H
24	02.04.011	针杆线钩	1	
25	02.01.011	针杆下轴套	1	
26	02.01.020	针杆下轴套	1	H
27	02.04.017-2	螺钉	1	
28	02.04.017	针杆连接柱	1	
29	02.04.008	针杆	1	
30	02.04.008H	针杆	1	H
31	02.09.037	螺钉	1	
32	23.309	垫圈	2	
33	02.05.020	面部防油板	1	
34	02.04.012	针杆上轴套	1	
35	0000	毛毡	1	
36	02.05.014	橡胶塞	1	
37	02.04.007	针杆下轴套线钩	1	

3. 针杆、勾线分组件/Needle bar & Hook of driving shaft components

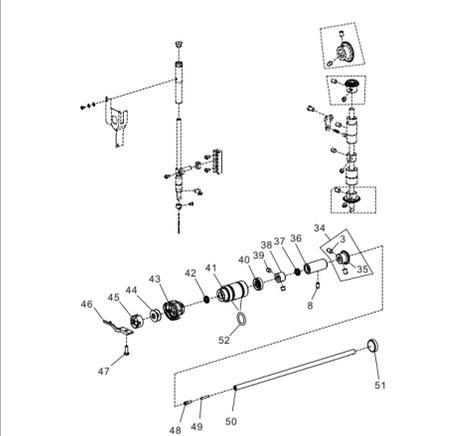

序号 Ref.No.	物料号 Part.No.	名称 Description	数量 Qty	备注 Remark
34	29.01.192	下轴伞齿轮部件	1	
35	29.01.192-1	下轴伞齿轮	1	
36	29.07.024	下轴后轴套	1	
37	29.05.013	油封	1	
38	29.07.020	挡圈	1	
39	01.10.039	螺钉	2	
40	29.06.009	油封	1	
41	29.06.030	下轴前轴套	1	
42	29.05.102	油封	1	
43	29.07.020	钩7.94BTR	1	
44	29.07.020	钩7.94ATR	1	
45	01.07.003	螺母	1	H
46	29.01.002	螺母	1	
47	29.01.138	定位定位器	1	
48	01.10.010	螺钉	1	
49	02.09.021	下轴限位油封	1	
50	29.01.085	下轴	1	
51	02.05.015	橡胶塞	1	
52	02.05.005	O形圈	2	

4. 压脚分组件/Hang Lifter Components

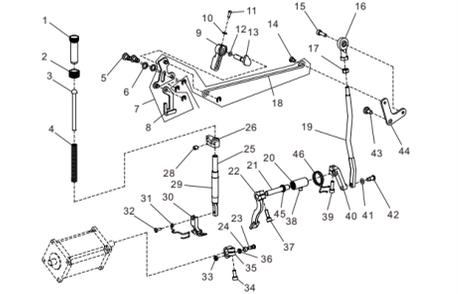

序号 Ref.No.	物料号 Part.No.	
---------------	-----------------	--